G2

Digital Video Indoor Monitor

Quick user guide

RoHS

● Indoor Monitor Overview

1.1 Schematic plan view

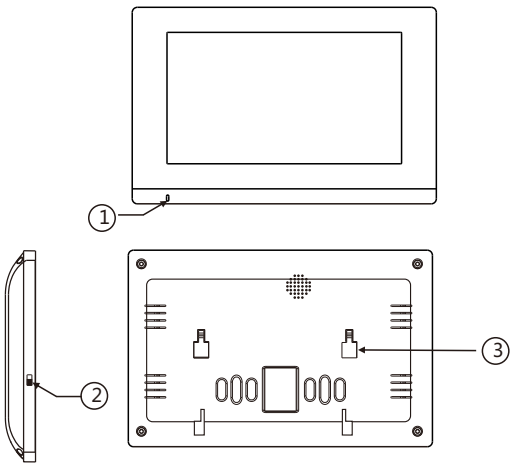

Function Description		
① microphone	② power	③ bracket position

Technical Parameters			
Operating Voltage	DC 13-17V(G2) DC 15-24V (G2.2)	Operating temperature	-20-55℃
Standby Current	230mA	Standby power consumption	3W
Working current	320mA	Talk mode	dual

1.2 Installation steps

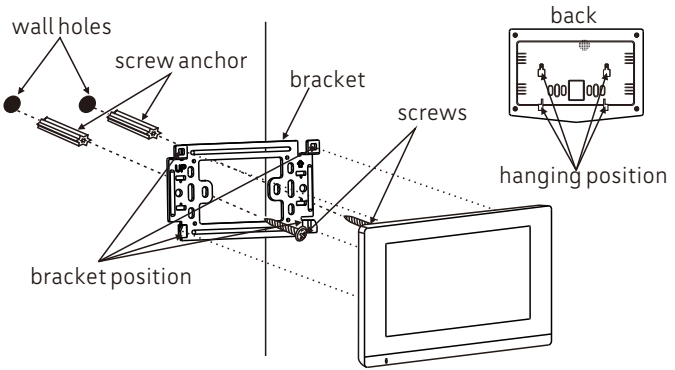

Mark installation postion→Insert anchor→Fix bracket→Aim and hang

● Wiring diagram

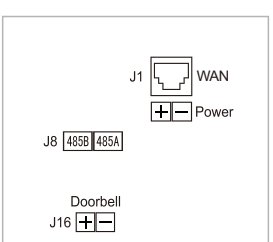

- System diagram

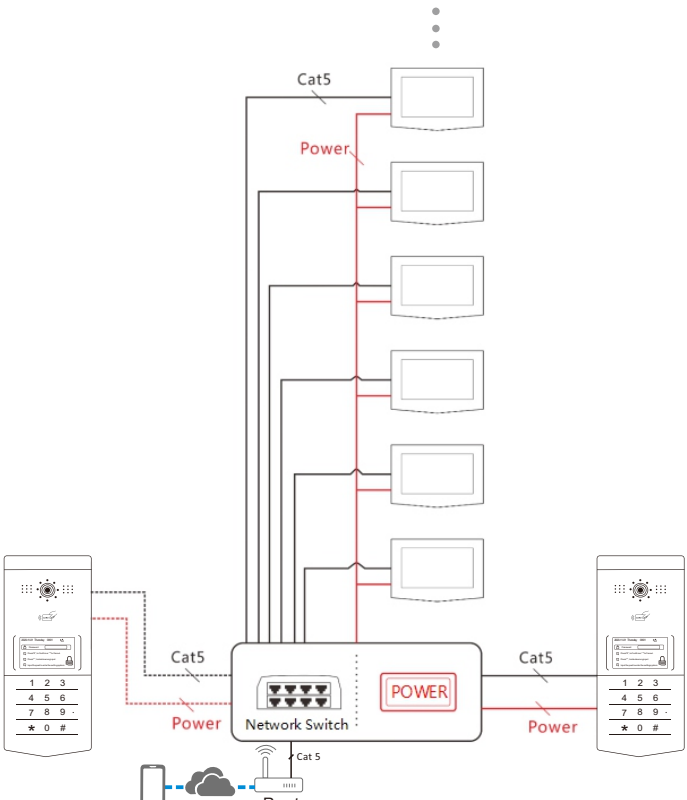

- Indoor Monitor operating instructions

2.1Main interface

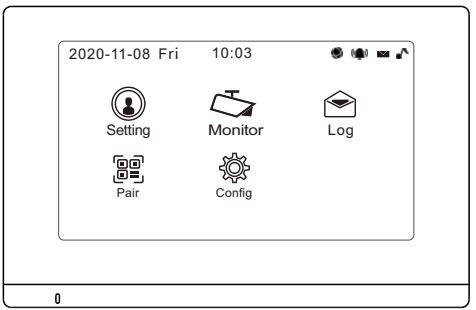

Status prompt	Gray icon
The internet	Network Issue
Alarm	No alam information
Message	No message
Ringtone	Do Not Disturb mode

2.2 User Settings

1

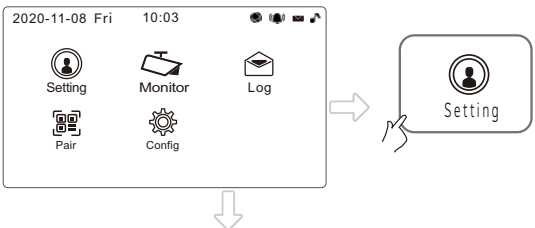

2

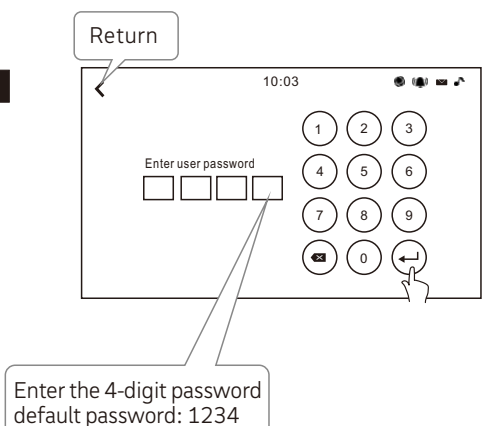

3

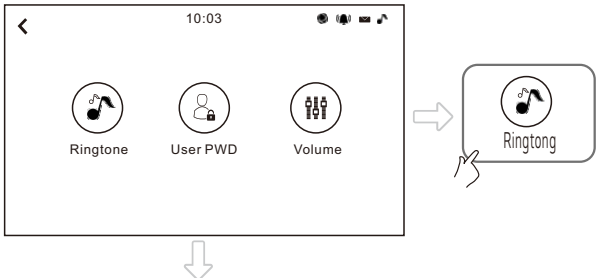

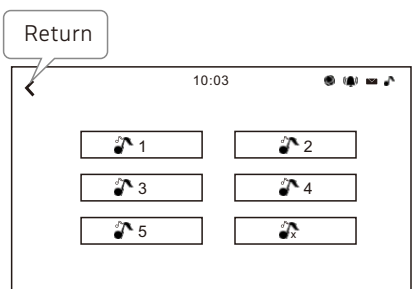

Choose your favorite ringtones

4

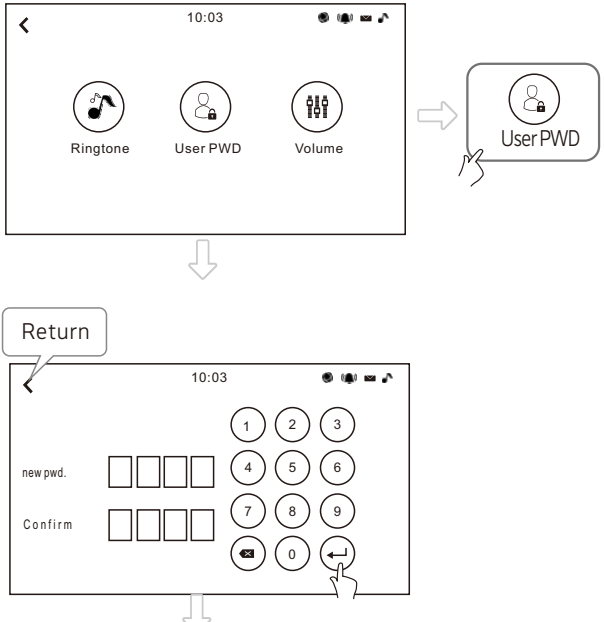

Enter the 4-digit password, you can reset a new password

5

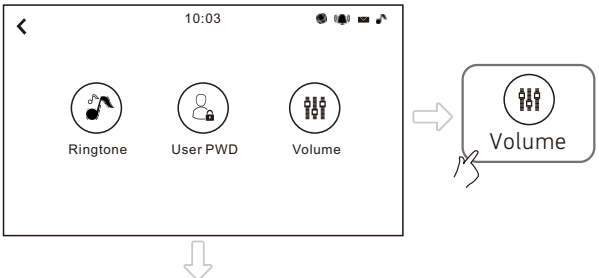

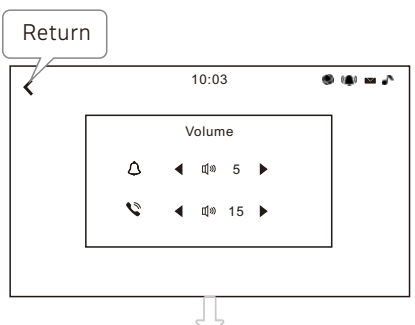

Choose your favorite ringtone and volume

2.3 Monitor

1

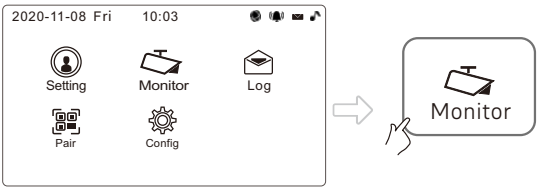

Return

2

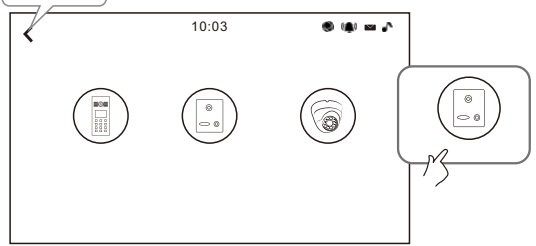

Monitor the front door 01/02/03

Monitor the villa door

Monitor cameras

3

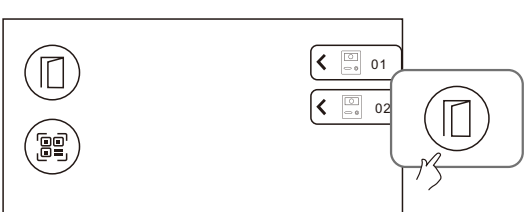

- Unlock

4

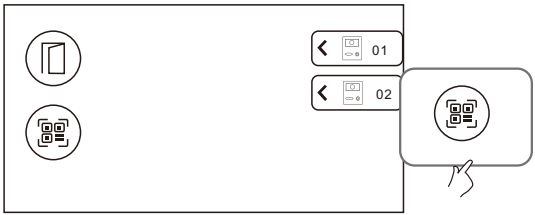

Display the QR code of the outdoor station

5

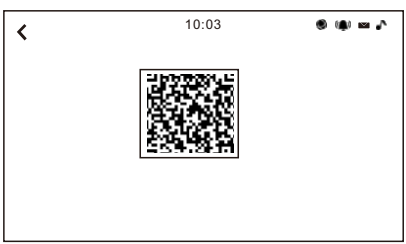

Install CCL-SH APP on your phone, click on the main interface "Bind Device", scan the QR code of the outdoor station to bind the device.

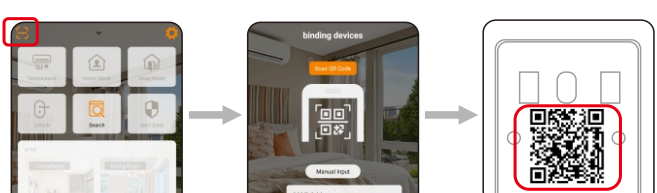

CCL-SH APP

QR code on the back of the outdoor station

2.4 Log

1

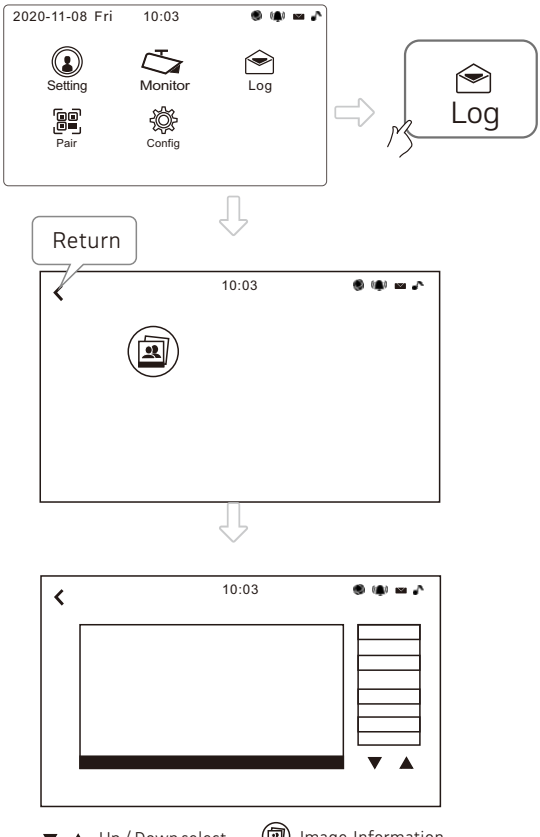
2020-11-08 Fri 10:03
Setting
Monitor
Log
Pair
Config
Log
Return
10:03
10:03
▼ ▲ Up / Down select
Image Information

2.5 Config

1

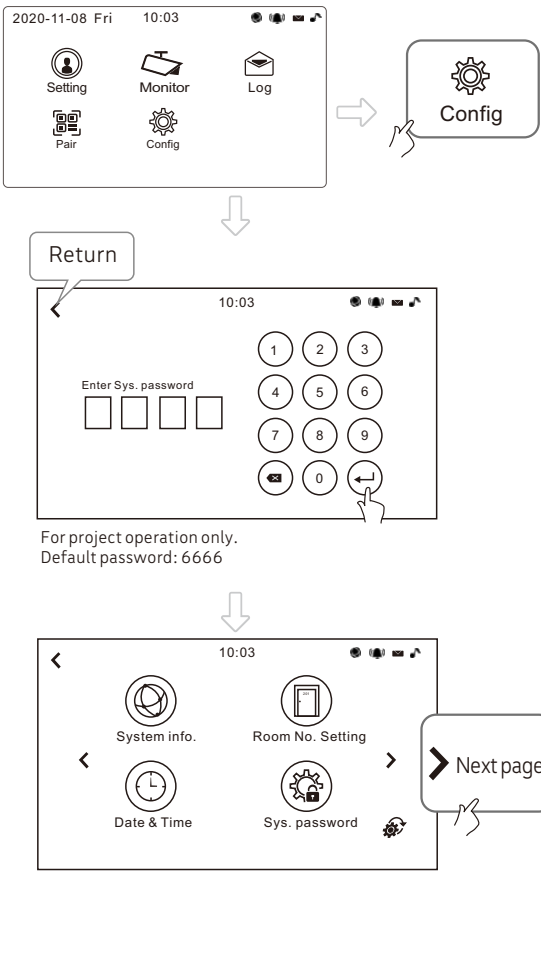
2020-11-08 Fri
10:03
Setting
Monitor
Log
Pair
Config
Config
Return
10:03
Enter Sys. password
1
2
3
4
5
6
7
8
9
0
For project operation only.
Default password: 6666
10:03
System info.
Room No. Setting
Date & Time
Sys. password
Next page

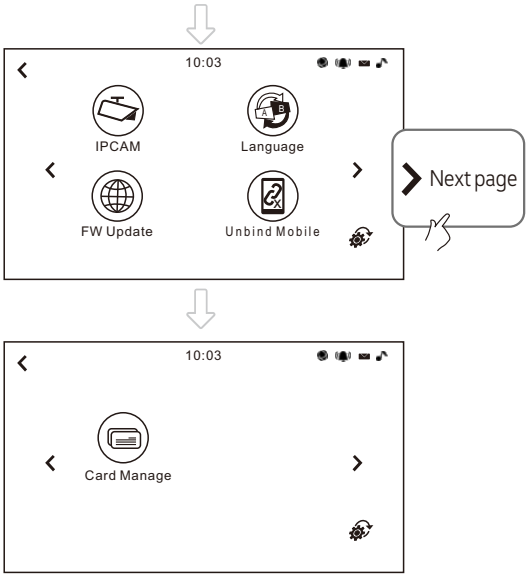
10:03
IPCAM
Language
FW Update
Unbind Mobile
Next page
10:03
Card Manage

2

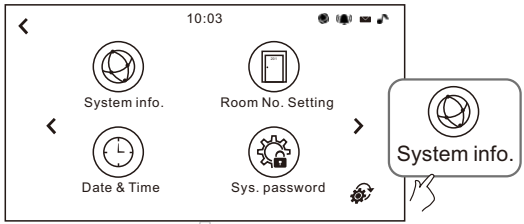
10:03
System info.
Room No. Setting
Date & Time
Sys. password
System info.

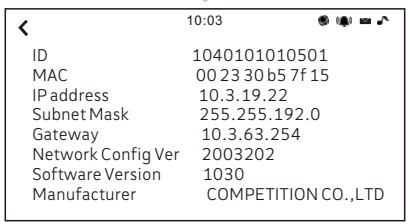
10:03
ID 1040101010501
MAC 00 23 30 b5 7f 15
IP address 10.3.19.22
Subnet Mask 255.255.192.0
Gateway 10.3.63.254
Network Config Ver 2003202
Software Version 1030
Manufacturer COMPETITION CO.,LTD

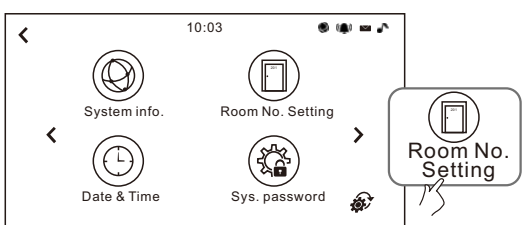
10:03
System info.
Room No. Setting
Date & Time
Sys. password
Room No. Setting

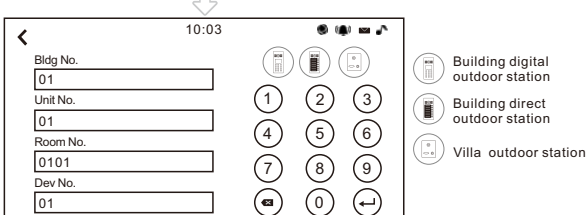
10:03
Bldg No.
01
Unit No.
01
Room No.
0101
Dev No.
01
1 2 3
4 5 6
7 8 9
0
Building digital outdoor station
Building direct outdoor station
Villa outdoor station

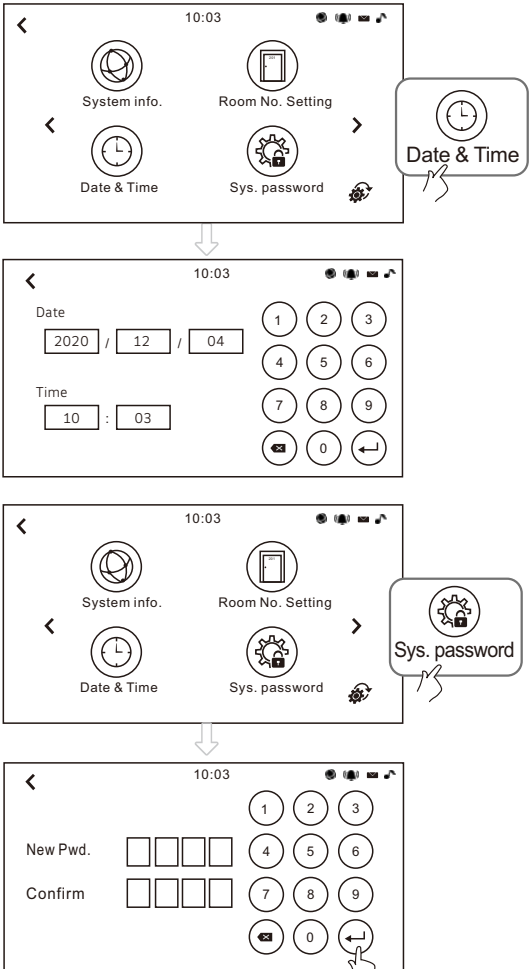
10:03
System info.
Room No. Setting
Date & Time
Sys. password
Date & Time
10:03
Date
2020 / 12 / 04
Time
10 : 03
1 2 3
4 5 6
7 8 9
0
10:03
System info.
Room No. Setting
Date & Time
Sys. password
Sys. password
10:03
New Pwd.
Confirm
1 2 3
4 5 6
7 8 9
0

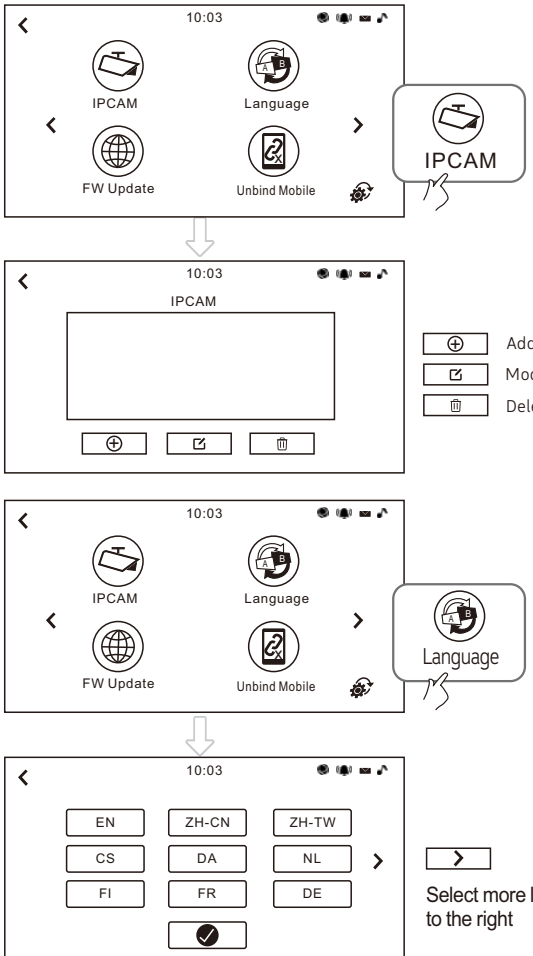
10:03
IPCAM
Language
FW Update
Unbind Mobile
IPCAM
10:03
IPCAM
Add
Modify
Delete
10:03
IPCAM
Language
FW Update
Unbind Mobile
Language
10:03
EN
ZH-CN
ZH-TW
CS
DA
NL
FI
FR
DE
Select more languages to the right

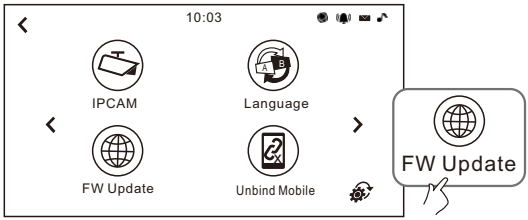
10:03
IPCAM
Language
FW Update
Unbind Mobile
FW Update

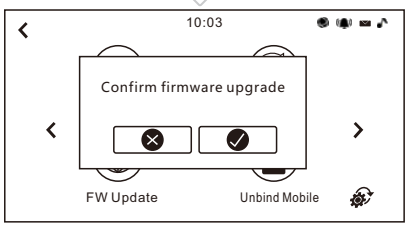
10:03
Confirm firmware upgrade
FW Update
Unbind Mobile

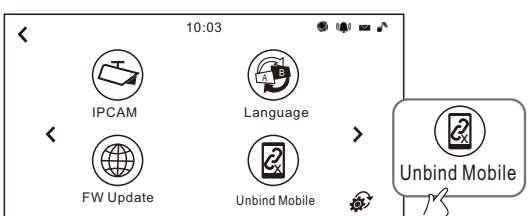
10:03
IPCAM
Language
FW Update
Unbind Mobile
Unbind Mobile

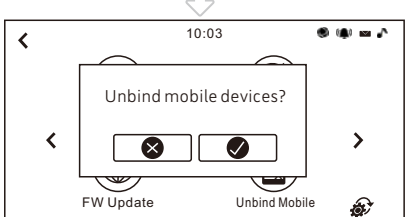
10:03
Unbind mobile devices?
FW Update
Unbind Mobile

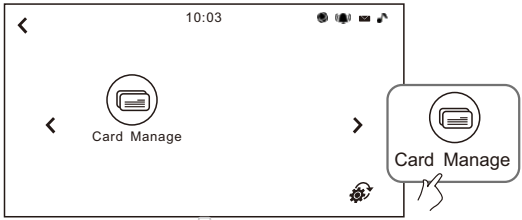
10:03
Card Manage
Card Manage

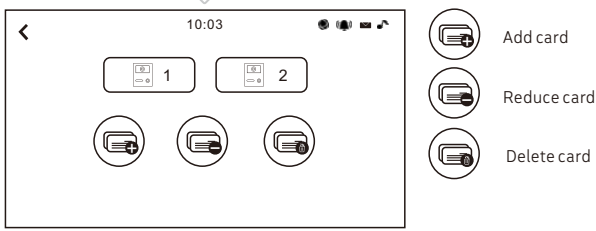
10:03
1
2
Add card
Reduce card
Delete card

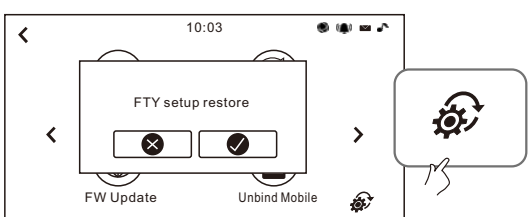
10:03
FTY setup restore
FW Update
Unbind Mobile

• Network settings

Set the IP of the router's LAN port to: 10.3.63.254

The subnet mask is set to: 255.255.192

• Mobile App Operation

① APP Download

Android

iOS

1. Scan the QR code to download.

   Or Android: Search "CCL-SH APP" from Google Play;

   iOS: Search and download "CCL-SH APP" from Apple Store.

2. Android running 6.0 and above.

3. IOS running version 9.0 and above.

② Apply to sign up a new account

- Open CCL-SH APP, sign up a new account, fill out the basic information to complete the registration.

③ Login

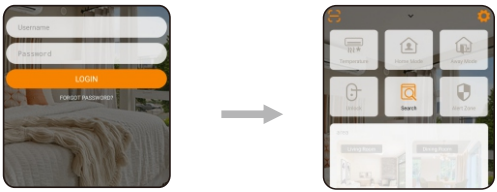

- Sign up finished, log in APP, enter the main interface.

④ Binding outdoor station

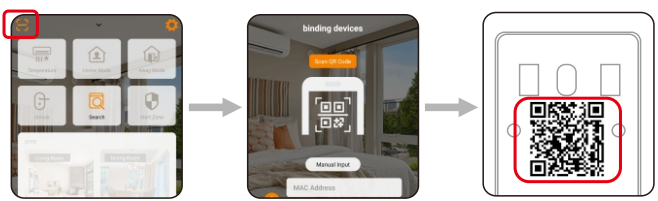

CCL-SH APP

QR code on the back of the outdoor station

- Click the Bind Decice button, Scan the QR code on the back of the outdoor station to bind the device or manually enter the mac address and activation code to bind the outdoor station.